


[LANCIA](#) / [YPSILON](#) / [1.3 JTD](#) / [PROCEDURES](#) / [44 SUSPENSION AND WHEELS](#) / [4450 WHEELS AND HUBS](#)
/ [4450D REAR WHEEL HUBS](#) / 4450D10 HUB OF ONE REAR WHEEL, L/H OR R/H - R+R WITH WHEEL REMOVED

2429272 - 4450D10 hub of one rear wheel, l/h or r/h - r+r with wheel removed

 Removing ([Refitting](#) )


Proceed with removal - [4450D70 hub cap of one rear wheel, l/h or r/h - r+r](#) .

- 1. Undo the pins (1a) and remove the rear brake drum (1b).

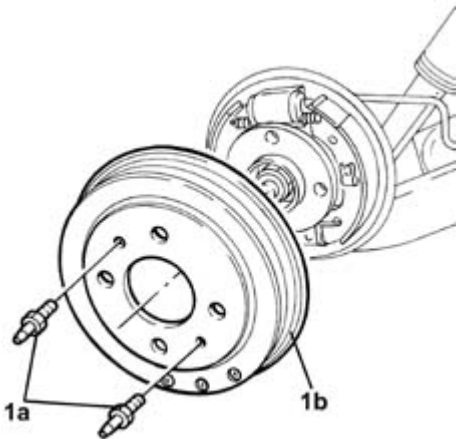

- 1. Undo the nut (1a) and remove the rear wheel hub (1b) complete with spacers (1c).


 The rear wheel hub bearing should not be removed from the hub. If it proves necessary on account of noise or excessive clearance, replace the rear wheel hub complete with bearing.

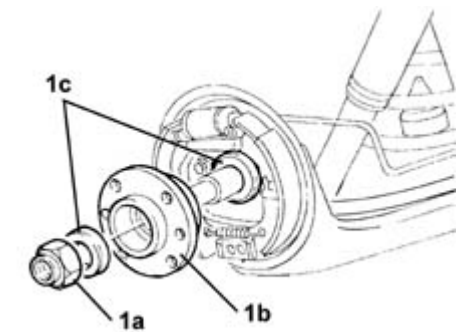

 Refitting ([Removing](#) )

- 1. Refit the rear wheel hub (1a) complete with spacers (1b).
- 2. Tighten the nut fixing the rear wheel hub to the recommended torque.

	Fastening	Component	Ø	Value (daNm)
2	Nut	REAR WHEEL HUB WITH BEARINGS	M22	26.6 ÷ 29.4

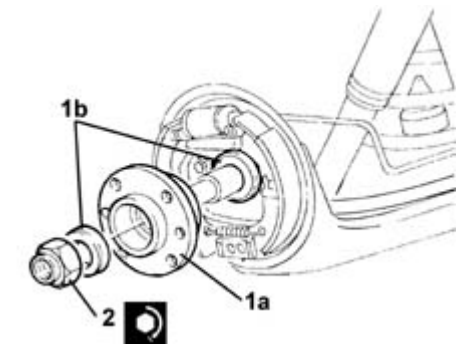

Place the rear brake drum back in its housing and fix it tightening the pins to the recommended torque.

	Fastening	Component	Ø	Value (daNm)
-	Pin	REAR BRAKE DRUM	M8	(Wheel hub side) 1.0 ÷ 1.4

Proceed with refitting - [4450D70 hub cap of one rear wheel, l/h or r/h - r+r](#) .