

2429699 - 7065C72 front cigar lighter socket/power point - fasten

 Removing ([Refitting](#) )


- 1. Release and open the cover.
- 2. Withdraw the cigarette lighter seating (2a) using the special tool (2b).

 The tool must engage in the recesses (2c) in the cigarette lighter seating.


	Name	Country
2b	Pliers	1.876.044.000

- 3. Disconnect the electrical connection.

	Name	Connector
3	Cigar lighter/current socket	P50

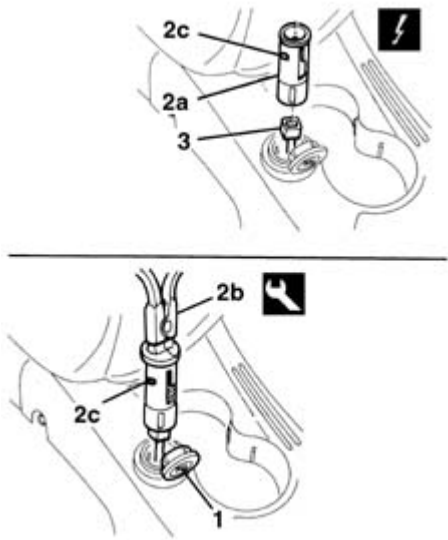

- 1. If necessary, remove the ring nut and cover (1a), releasing the retainer (1b) from the housing (1c).

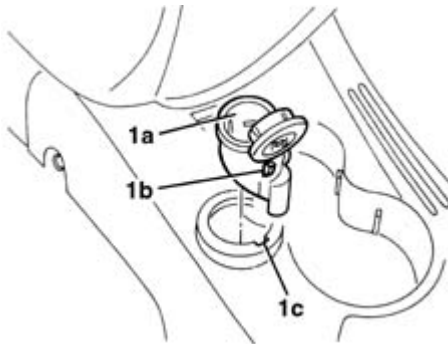

 Refitting ([Removing](#) )

- Check that the cigarette lighter seating is undamaged.
- Position the ring nut and cover attaching the retainer in the housing.
- Connect the electrical connection.
- Fit the cigar lighter housing.
- Check that the current socket is working properly.
- Close the lid.