


1. Withdraw the handbrake control cables from the passage on the body floor pan.
2. Remove the plugs.
3. Disconnect the handbrake cables from the rear brakes.
4. Remove the handbrake cable after releasing from the underbody fastenings.

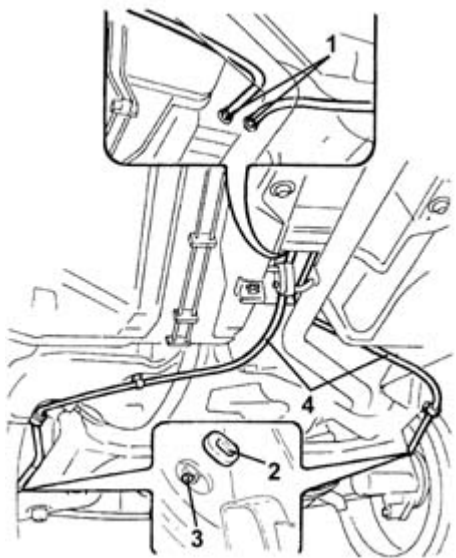

Refitting ([Removing](#) )

Refit the handbrake control cables and secure with underbody fastenings.

Connect the handbrake cables to the rear brakes.

Refit the plugs in their housings.

Pass the handbrake cables through the passage on the body floorpan.

Connect the handbrake cables to the mount.

Proceed with refitting - [3380A04 handbrake - check travel](#) .

Proceed with refitting - [7040L22 REAR TRIM on TUNNEL -R.R.](#) .

Remove the car from the ramps.